2. Exploded View and Parts List

2-1 Mechanical Parts (1) - 2-2

2-2 Mechanical Parts (2) - 2-4

2-3 Mechanical Parts (3) - 2-6

2-4 Ass'y EVF - 2-8

2-5 Ass'y Right - 2-10

2-6 Ass'y LCD - 2-12

2-7 Ass'y Left - 2-14

2-8 Ass'y Front - 2-16

2-9 Ass'y Camera/Deck - 2-18

2-10 Ass'y Rear - 2-20

2-1 Mechanical Parts (1)

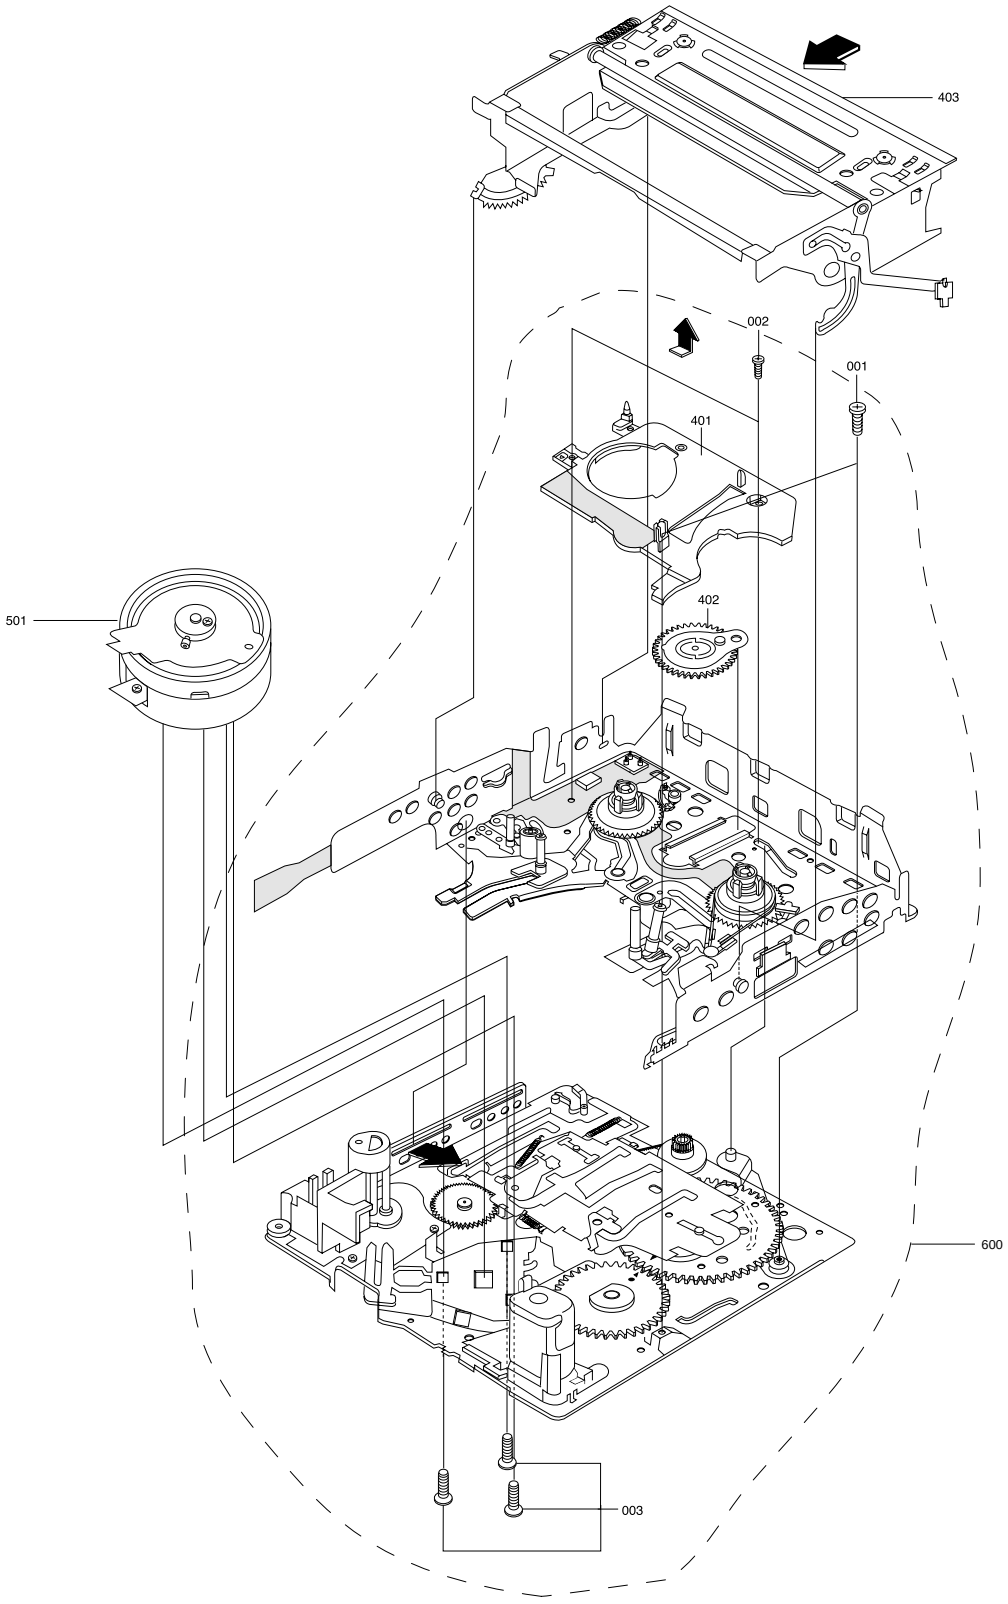

	Loc. No	New Part No	Description and Specification	Remark
001	6009-001287		SCREW-SPECIAL;SM45C,2,TH,+,M1.4,L3.9(3.2)	
002	6001-001575		SCREW-MACHINE;PH,+,M1.4,L3.5,ZPC(BLK),SW	
003	6001-001417		SCREW-MACHINE	
401		AD97-04500A	ASSY-COVER-REEL;SUS+ETC,DE-10,ASSY	
402		AD97-04498A	ASSY-IDLER;POM+ETC,DE-10,ASSY	
403		AD97-04757A	HOUSING-ASSY;-,-,-,-,-,-,-,DE-6	
501		AD97-04440A	ASSY-DRUM PAL;-,DE-10,PAL	
600		AD97-04625A	ASSY-SEMI DECK;DE-10	

2-2 Mechanical Parts (2)

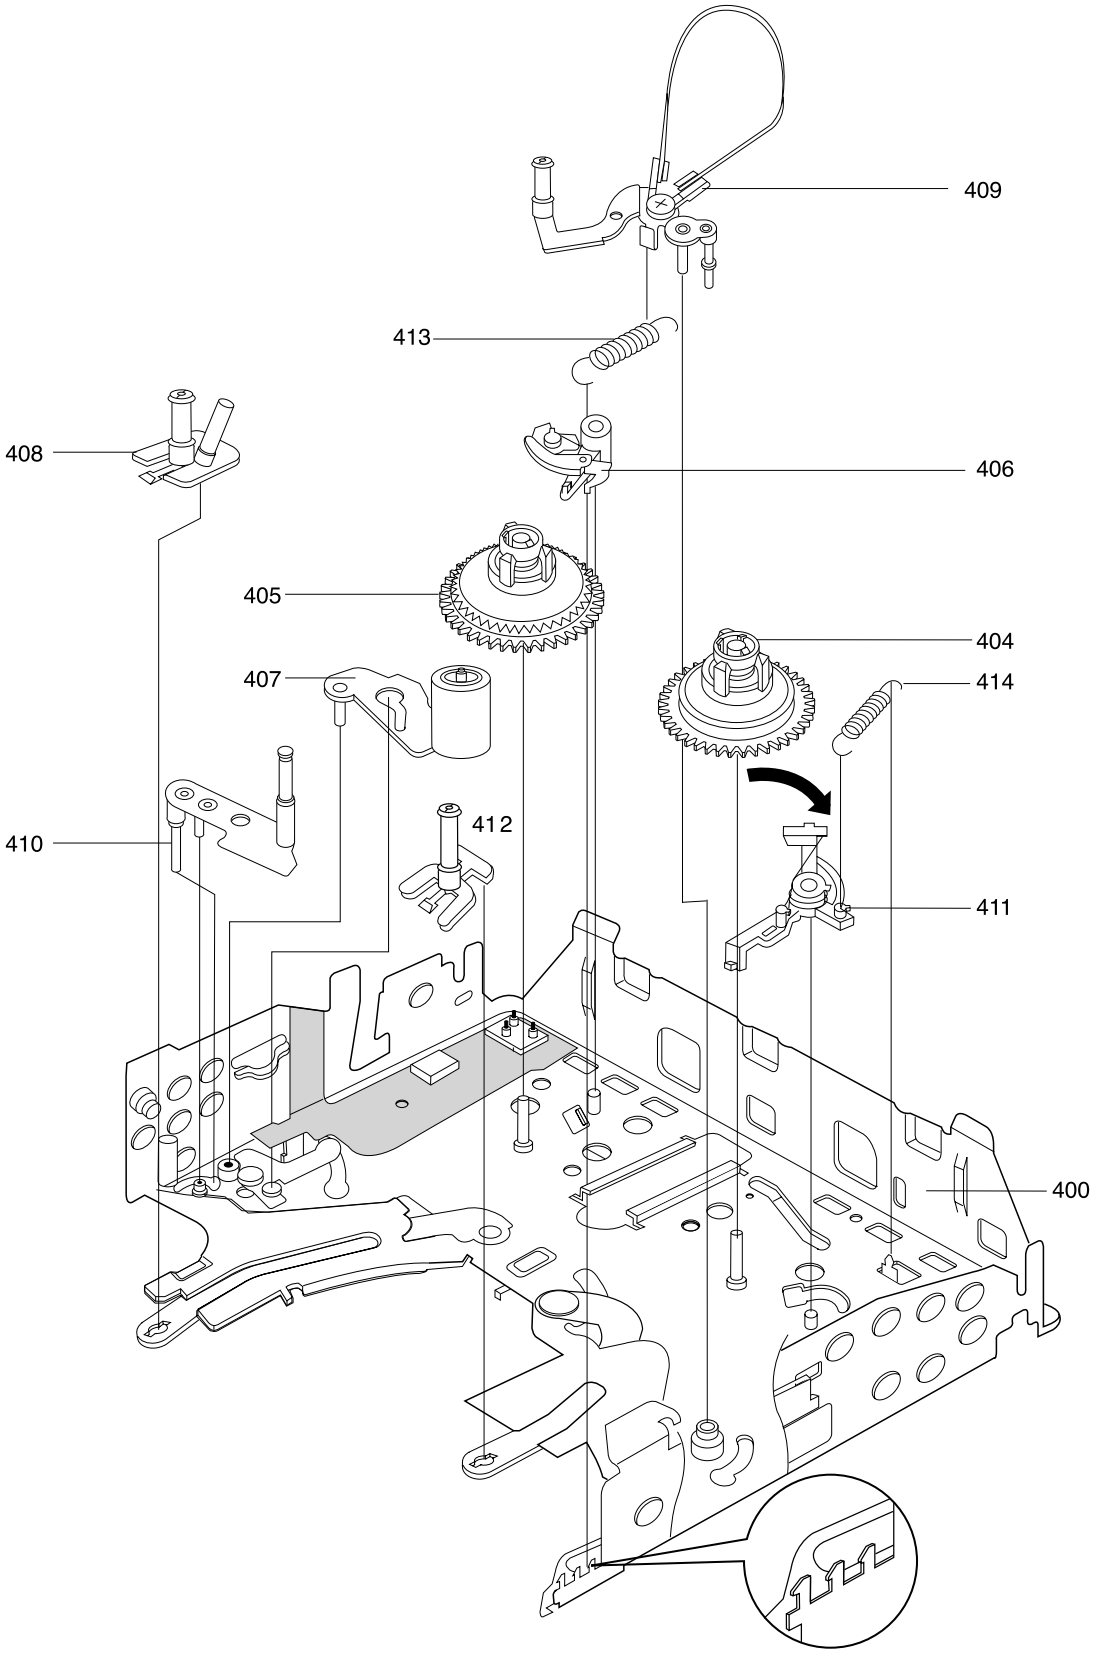

Loc. No	New Part No	Description and Specification	Remark
400	AD97-04497A	ASSY-SUB-CHASSIS;SECC+ETC,DE-10,ASSY	
404	AC66-12041A	REEL-S(ASSY);-,-,-,DE-6	
405	AC66-12042A	REEL-T(ASSY);-,-,-,DE-6	
406	AC66-30120A	LEVER-BRAKE SOFT T (ASSY);-,-,-,-,DE-6,-	
407	AD97-04490A	ASSY-ARM-PINCH;-,DE-10,SUS+ETC	
408	AD97-04491A	ASSY-POLE-BASE T;-,DE-10,PPS+ETC	
409	AD97-04493A	ASSY-ARM-TENSION;-,DE-10,ASSY	
410	AD97-04494A	ASSY-ARM-REVIEW;SUS+ETC,DE-10,ASSY	
411	AD97-04499A	ASSY-BRAKE-SUB S;DURACON+ETC,DE-10,ASSY	
412	AD97-04522A	ASSY-POLE-BASE S;PPS+ETC,DE-10,-	
413	AD61-00922A	SPRING ETC-TENSION;DE-10,SWPB,-,-,-,-,-	
414	AC61-62022A	SPRING ETC-SOFT BRAKE(S);-,-,-,-,-,-,-,-	

2-3 Mechanical Parts (3)

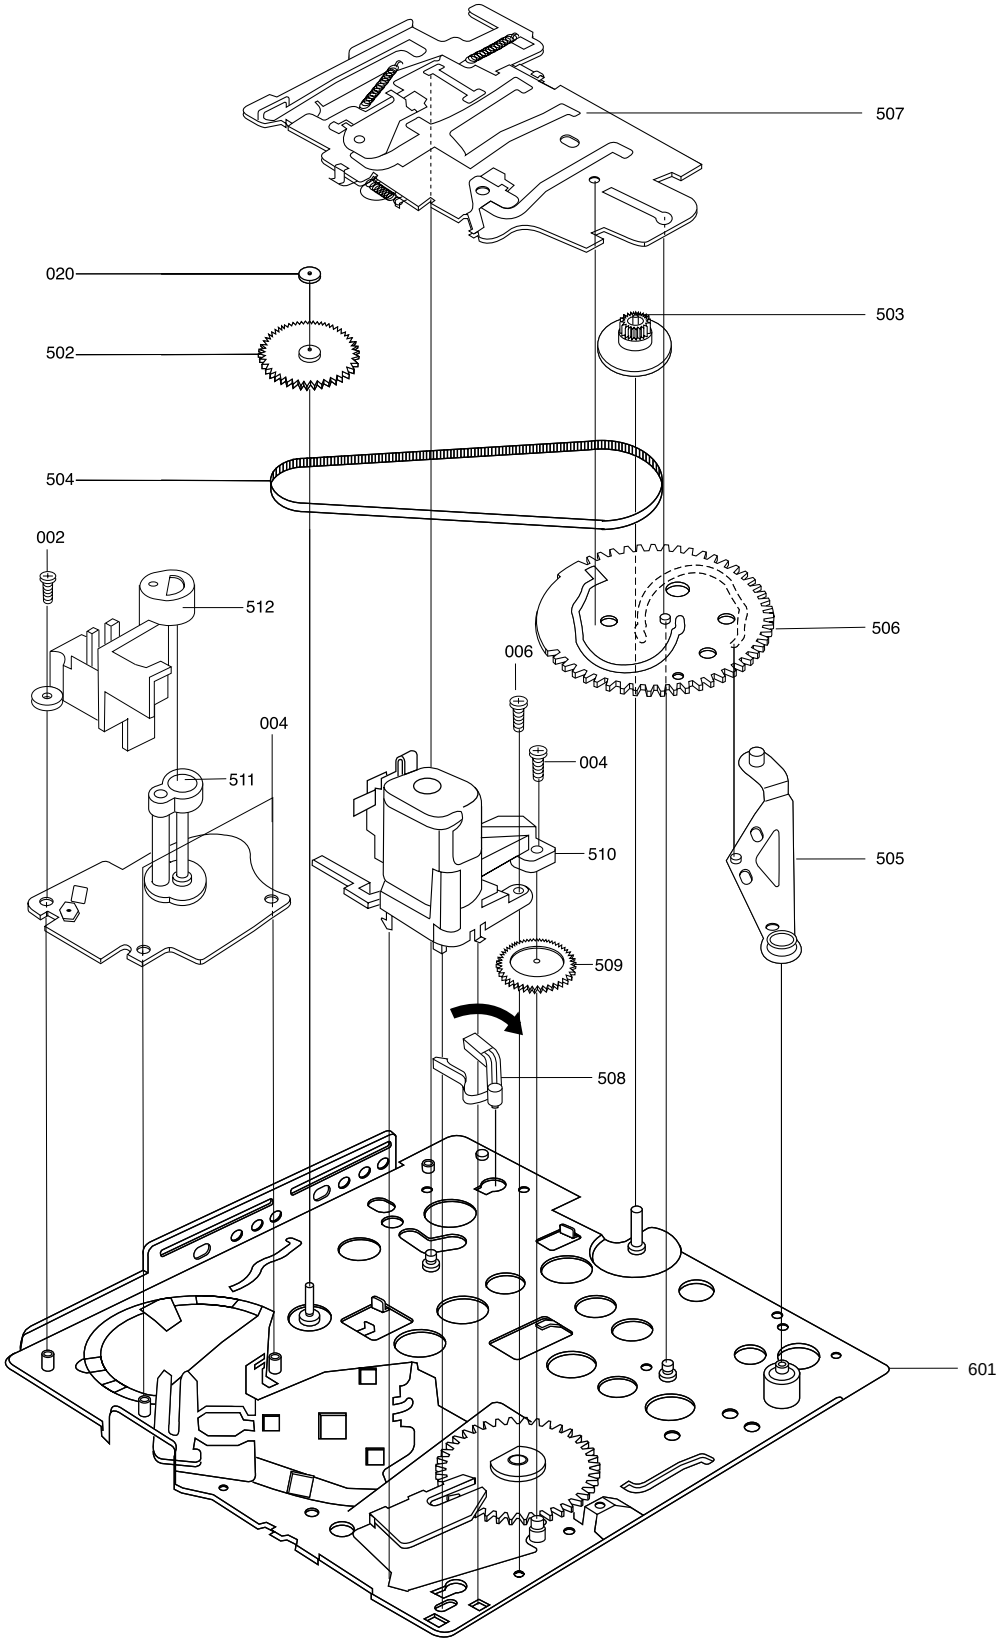

Loc. No	New Part No	Description and Specification	Remark
002	6001-001575	SCREW-MACHINE;PH,+,M1.4,L3.5,ZPC(BLK),SW	
004	AC60-12112A	SCREW-BH;-,WHT,L2,L2,BH,+,-,M1.4,WHT,-	
006	AC60-10017A	SCREW-MACHINE;-,-,FEFZY,SWCH1018,+,M1.7,	
020	AC60-30017A	WASHER-SLIT;ID 1,OD 2.6,T 0.4,POLYSLIDER	
502	AD66-00141A	GEAR-CAPSTAN;DE-10,PA(1724K),-,-,-,-,-,-	
503	AD66-00142A	GEAR-PULLEY;DE-10,DURACON M90-44,-,-,-,-	
504	AC66-62001A	BELT-TIMMING;-,L137 T0.4,-,-,-,-,-,-	
505	AD66-00130A	LEVER-CAM;DE-10,SUS430 CP,0.6,-,-,-,-,-	
506	AD66-00140A	GEAR-CAM MAIN;DE-10,ZYTEL 70G-43L,-,-,-,	
507	AD97-04496A	ASSY-SLIDE-MAIN;SECC+ETC,DE-10,ASSY	
508	AD66-00131A	LEVER-EJECT;DE-10,DURANEX #3300,-,-,-,-,	
509	AD66-00139A	GEAR-LOADING;DE-10,DURACON M90-44,-,-,-,	
510	AD97-04504A	ASSY-LOADING-MOTOR;MOTOR+TEC,DE-10,ASSY	
511	AD97-04554A	ASSY-CAPSTAN-MOTOR;-,DE-10,ASSY	
511	AD97-04555A	ASSY-CAPSTAN MOTOR;-,DE-10,ASSY	
512	AD61-00950A	HOLDER-FPC SUB;DE-10,POM,-,-,-,NATURAL,-	
601	AD97-04495A	ASSY-MAIN CHASSIS;DE-10	

2-4 Ass'y EVF

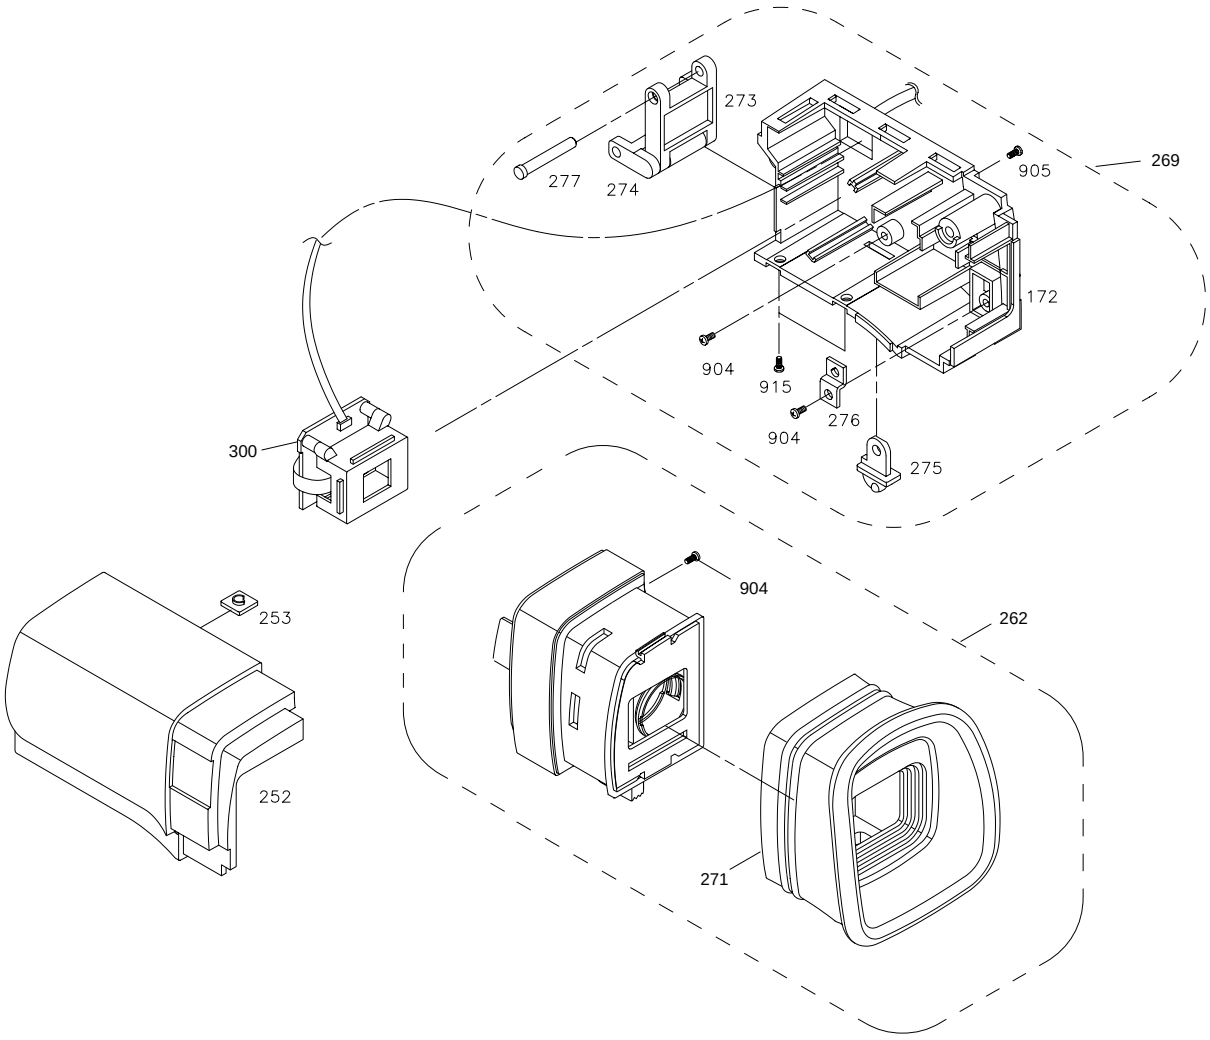
273
277
274
905
269
172
904
915
276
904
275
300
253
252
904
262
271

Loc. No	New Part No	Description and Specification	Remark
172	AD64-00703E	CASE-EVF R, ABS94VO, EVF	
	AD64-00452F	CASE-EVF R, ABS94VO, CVF	
252	AD64-00450M	CASE-EVF L;ABS94VO D/GRY VE0812 G6238	
	AD64-00450N	CASE-EVF L	
253	AC61-32047A	PLATE-NUT;SPTE T0.8	
262	AD97-02441A	ASSY-EVF LENS	
	AD97-02440A	ASSY-CVF LENS	
269	AD97-06589A	ASSY-CASE EVF R, EVF	
	AD97-06905A	ASSY-CASE EVF R, CVF	
271	AD73-00040A	RUBBER-EYE CUP;SILICON D/GRAY	
273	AD66-00105A	LINK-EVF;POM BLK	
274	AD66-00106A	LINK-LOCK;ABS 94HB BLK	
275	AD64-00458A	LOCKER-EVF;POM BLK	
276	AD61-00104A	GUIDE-PLATE;SPTE T0.8	
277	AD61-00297A	SHAFT-EVF;SUS303	
300	AD97-04454A	ASSY-UNIT EVF;0.24”,PAL	PAL MODEL ALL
	AD97-01532A	ASSY-UNIT EVF;0.44”,NTSC	NTSC MODEL ALL
904	AC60-10055A	SCREW-TAPPING;M2X4 FZB	
905	AC60-10054A	SCREW-TAPPING;M2X6,FZB	
915	AC60-10043A	SCREW-TAPPING;1.7X6,FZB	

2-5 Ass'y Right

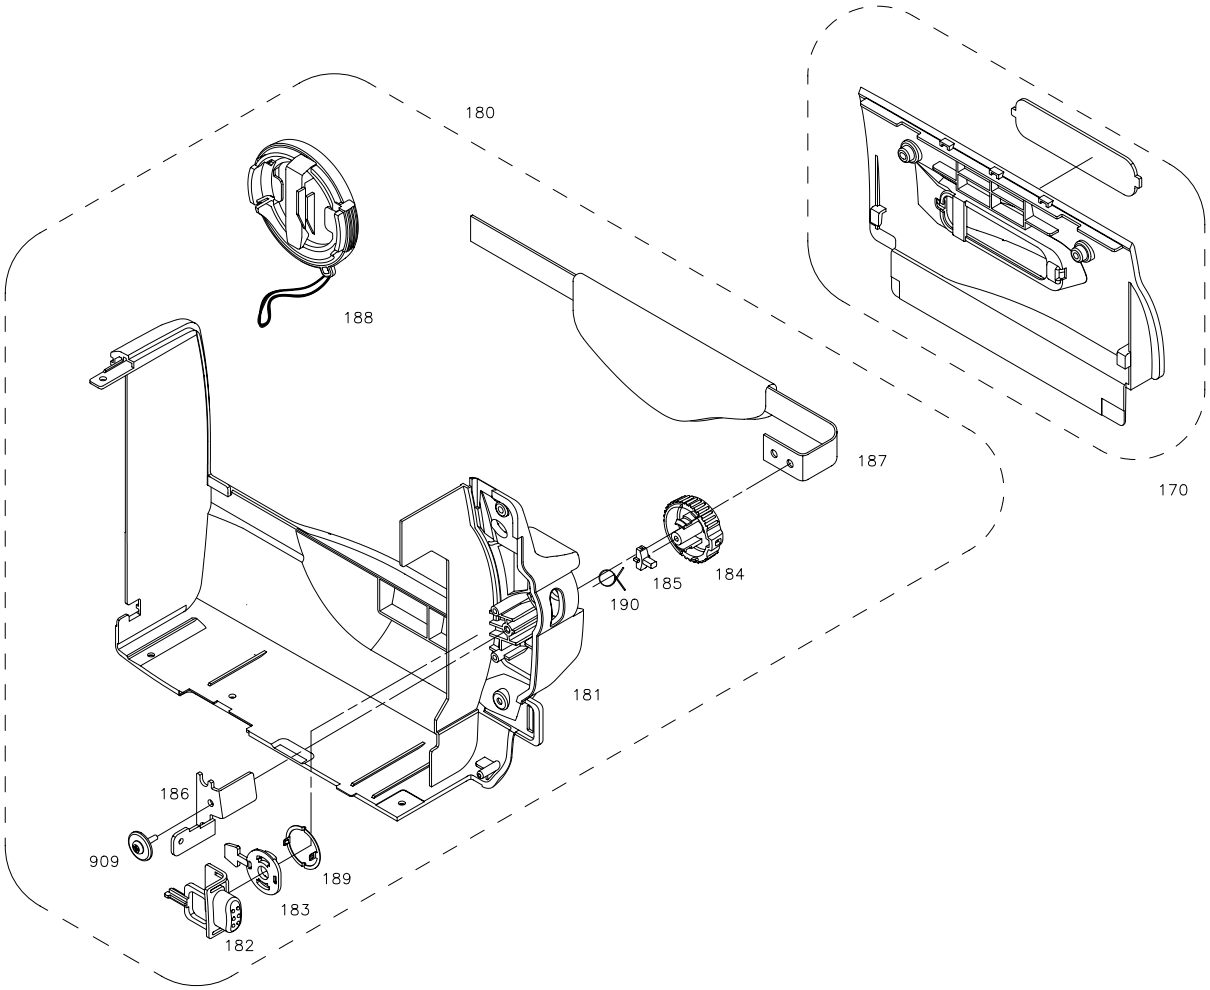

Loc. No	New Part No	Description and Specification	Remark
170	AD97-02642A	ASSY-COVER HOUSING,NORMAL	VP-L800U/VP-W80U
	AD97-02643A	ASSY-COVER HOUSING,Hi8	Hi8 MODEL ALL
180	AD97-04252B	ASSY-CASE RIGHT;ASS'Y,EXP	
	AD97-04253B	ASSY-CASE RIGHT;ASS'Y,DOM	
181	AD64-00694A	CASE-RIGHT;ABS94HB HF0660I G3532,EXP	
	AD64-00694B	CASE-RIGHT;ABS94HB HF0660I G3532,DOM	
182	AD64-00424A	BUTTON-REC/STOP;ABS94HB RED	
183	AD61-00905A	HOLDER-POWER;POM BLK	
184	AD64-00695A	KNOB-POWER;ABS94HB HF0660I G3532	
185	AD64-00696A	LOCKER-POWER;ABS94HB GREEN	
186	AD61-00214A	BRACKET-GRIP BACK;SUS304 T0.8	
187	AD59-00044A	UNIT-BELT GRIP;LEATHER, BLK	
188	AD97-03191A	ASSY-CAP HOOD;ASS'Y	
189	AD61-00906A	PLATE-SPRING POWER	
190	AD61-00915A	SPRING-LOCK POWER	
909	AD60-10509A	SCREW-TAP PWH	

2-6 Ass'y LCD

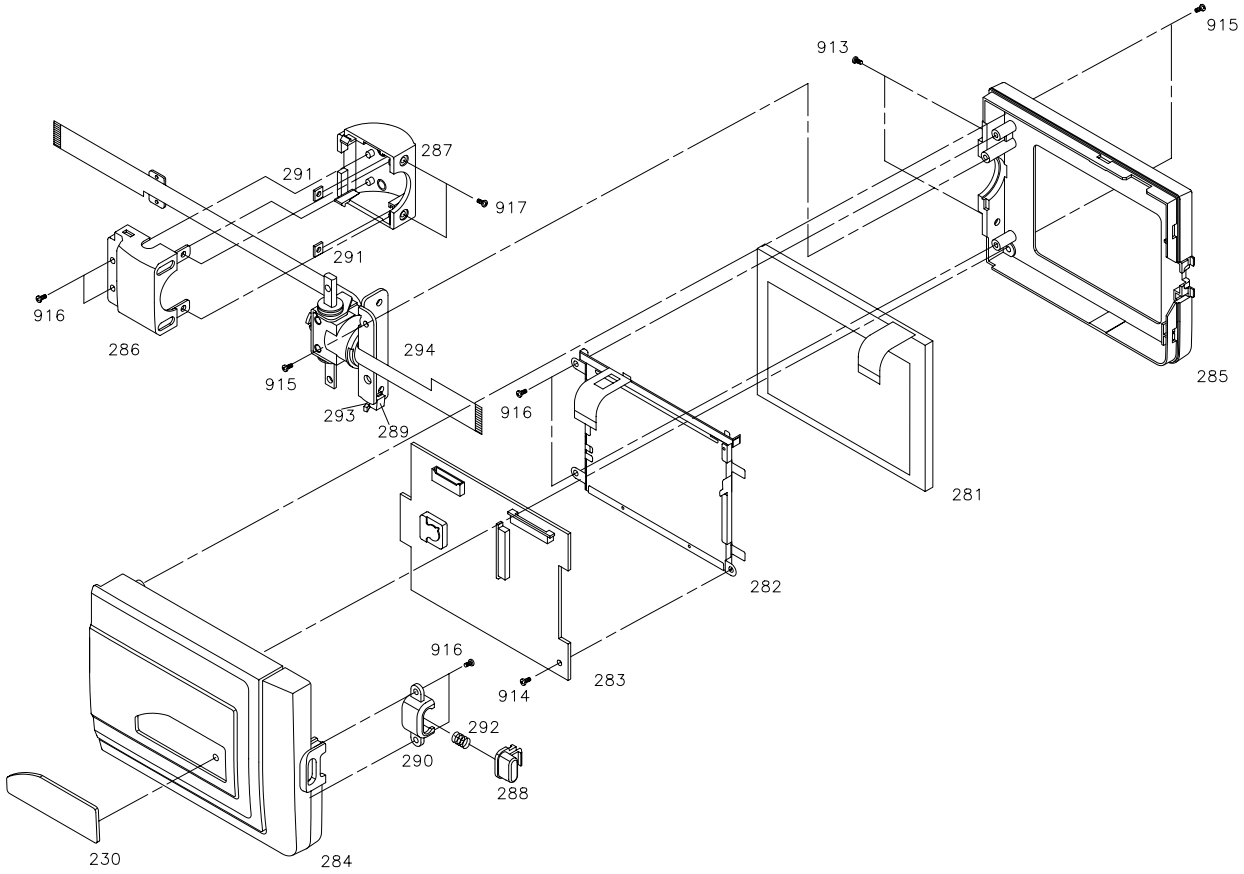
915
913
287
291
917
291
916
286
294
915
293
289
916
285
281
282
916
914
283
292
290
288
230
284

Loc. No	New Part No	Description and Specification	Remark
230	AD64-00757A	INLAY-DIGITAL;PVC SHEET	
281	AD07-00026A	CASIO LCD;PAL	
282	AD97-02233A	ASSY-BACK LIGHT;ASSY,M2, CASIO	
283	AD97-04622A	ASSY-LCD BOARD;PAL	
284	AD64-00758G	CASE-LCD TOP;ABS 94 VO	
285	AD64-00464A	CASE-LCD BOTTOM;ABS94VO PAL (COLOUR)	
286	AD63-00188G	COVER-HINGE TOP;ABS 94HB	
287	AD63-00190A	COVER-HINGE BOTTOM;ABS 94HB	
288	AD64-00445A	BUTTON-LCD LOCK;PC/ABS	
289	AD64-00446A	BUTTON-LCD REVERSE;ABS 94HB	
290	AD61-00585A	GUIDE-LCD LOCK;POM BLK	
291	AD61-12033A	BRKT-NUT;SECC T0.8	
292	AD61-00344A	SPRING-LCD LOCK;SWPB	
293	AD61-00627A	SPRING-LCD REVERSE;SUS304 WPB	
294	AD97-02487A	ASSY-HINGE;ASSY	
913	AC60-10019A	SCREW-MACHINE;M2X4 FZB	
914	AC60-10028A	SCREW-MACHINE;M1.7X3 FZB	
915	AC60-10043A	SCREW-TAPPING;TAP1.7X6 FZB	
916	AC60-12128A	SCREW-TAPPING;TAP1.7X4 FEB	
917	6001-001291	SCREW-MACHIN;M1.7X4 FZB	

2-7 Ass'y Left

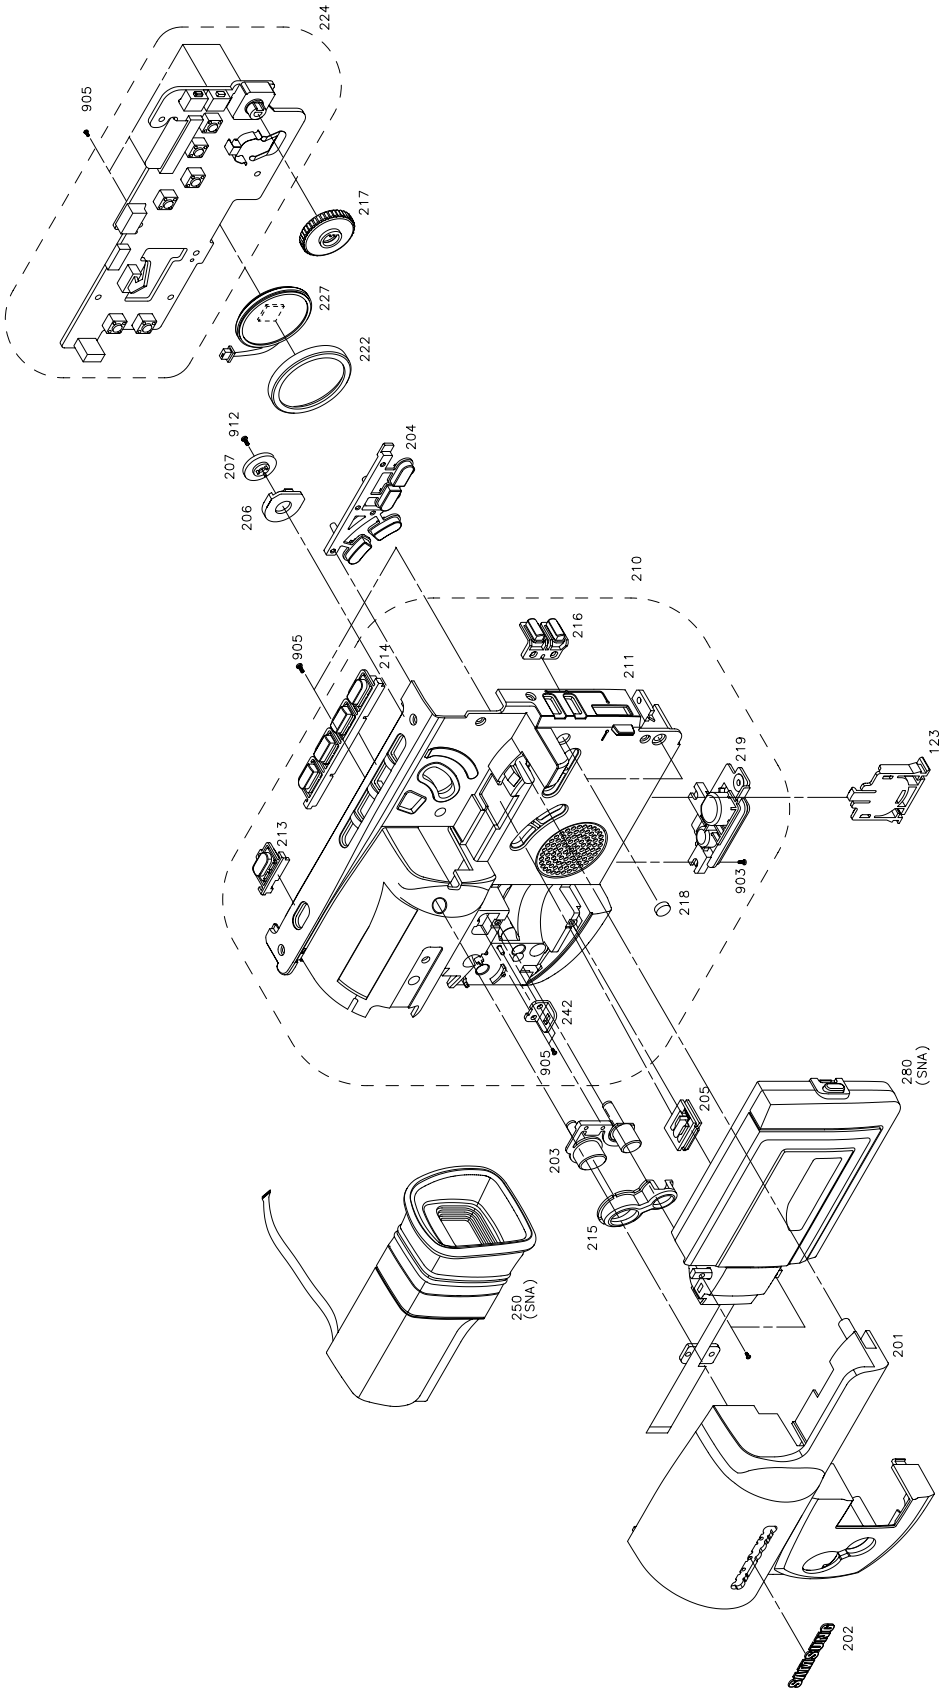
224
905
217
227
222
912
207
206
204
210
905
214
216
211
219
123
213
903
218
242
905
280
(SNA)
205
203
215
250
(SNA)
201
202

Loc. No	New Part No	Description and Specification	Remark
123	AD63-00065C	COVER-LI BATTERY	
201	AD63-00315U	COVER-LEFT(W6);ABS94HB HG0760 G6238	SCL810
	AD63-00315V	COVER-LEFT(W6);ABS94HB HG0760 G6238	SCL860
	AD63-00315W	COVER-LEFT(W6);ABS94HB HG0760 G6238	VP-L870
	AD63-00469A	COVER-LEFT(W6);ABS94HB HG0760 G6238	VP-L800U
	AD63-00469B	COVER-LEFT(W6);ABS94HB HG0760 G6238	VP-L800
	AD63-00469C	COVER-LEFT(W6);ABS94HB HG0760 G6238	VP-L850
	AD63-00469D	COVER-LEFT(W6);ABS94HB HG0760 G6238	VP-L850D
	AD63-00469E	COVER-LEFT(W6);ABS94HB HG0760 G6238	VP-L870
	AD63-00315X	COVER-LEFT(W6);ABS94HB HG0760 G6238	VM-C300
	AD63-00315Y	COVER-LEFT(W6);ABS94HB HG0760 G6238	VM-C360
	AD63-00315Z	COVER-LEFT(W6);ABS94HB HG0760 G6238	VM-C370
202	AD64-70085A	BADGE-SAMSUNG(30);AL (30mm)	
203	AD64-00753A	BUTTON-EASY(W4);ABS94HB NTR	
204	AD64-00427A	BUTTON-FUNCTION(W2);ABS94HB HF0660I G3532	
205	AD61-00600A	HOLDER-LOCK EVF;POM BLK	
206	AD61-00594A	RAIL-EVF;POM BLK	
207	AD61-00595A	RAIL-LOCK;ABS 94HB BLK	
210	AD97-04405A	ASSY-CASE LEFT(W4);W4-PJ, LIGHT(X)	VP-L800U/L800
	AD97-04406A	ASSY-CASE LEFT(W4);W4-PJ, LIGHT(O)	SCL810/SCL860/SCL870
			VP-L850/L850D/L870
211	AD64-00751A	CASE-LEFT(W4);W4-PJ, LIGHT(X)	VP-L800U/L800
	AD64-00751B	CASE-LEFT(W4);W4-PJ, LIGHT(O)	SCL810/SCL860/SCL870
			VP-L850/L850D/L870
213	AD64-00706A	BUTTON-TAPE EJECT;ABS94HB HF0660I G3532	
214	AD64-00707A	BUTTON-VCR;ABS94HB HF0660I G3532	
215	AD64-00755A	KNOB-DUMMY(W4);ABS94HB NTR	
216	AD64-00235B	BUTTON-FUNCTION-A(M2);ABS94HB HF0660I G3532	
217	AD64-00240C	KNOB-DIAL MENU(M2);ABS94HB HF0660I G3532	
218	AD69-00045A	PAD-LCD;SILICON	
219	AD97-03290A	ASSY-TRIPOD;PC G3532	
222	AD73-10048A	RUBBER-SPEAKER;RUBBER BLK	
224	AD97-04508A	ASSY-FUNCTION B'D(W6)	VP-L800U/L800/SCL810
	AD97-04464A	ASSY-FUNCTION BOARD	SCL860/SCL870
			VP-L850/L850D/L870
227	AD97-00244A	ASSY-SPEAKER;SC-L315C, 2816S	
242	AD61-00581A	BRACKET-HINGE	
250	AD97-06646A	ASSY-EVF,NTSC/B&W	SCW80/SCL810/SCL860/SCL870
	AD97-06930A	ASSY-EVF,PAL/B&W	VP-W80U/W80/W87/W87D
			VP-L800U/L800/L850/L850D/L870
	AD97-06956A	ASSY-EVF,DOM/B&W	VM-C300/C360/C370
	AD97-06931A	ASSY-CVF,NTSC/COL	SCW87
	AD97-06932A	ASSY-CVF,DOM/COL	VM-C170
903	AC60-10020A	SCREW-MACHINE(2X5);BLK	
905	AC60-10054A	SCREW-TAPPING(2X6);W4-PJ	
905	AC60-10054A	SCREW-TAPPING(2X6);BLK	
912	AC60-10073A	SCREW -TAP PLAIN(2X6);W-PJ(CASE-L+ASSY-EVF)	

2-9 Ass'y Front

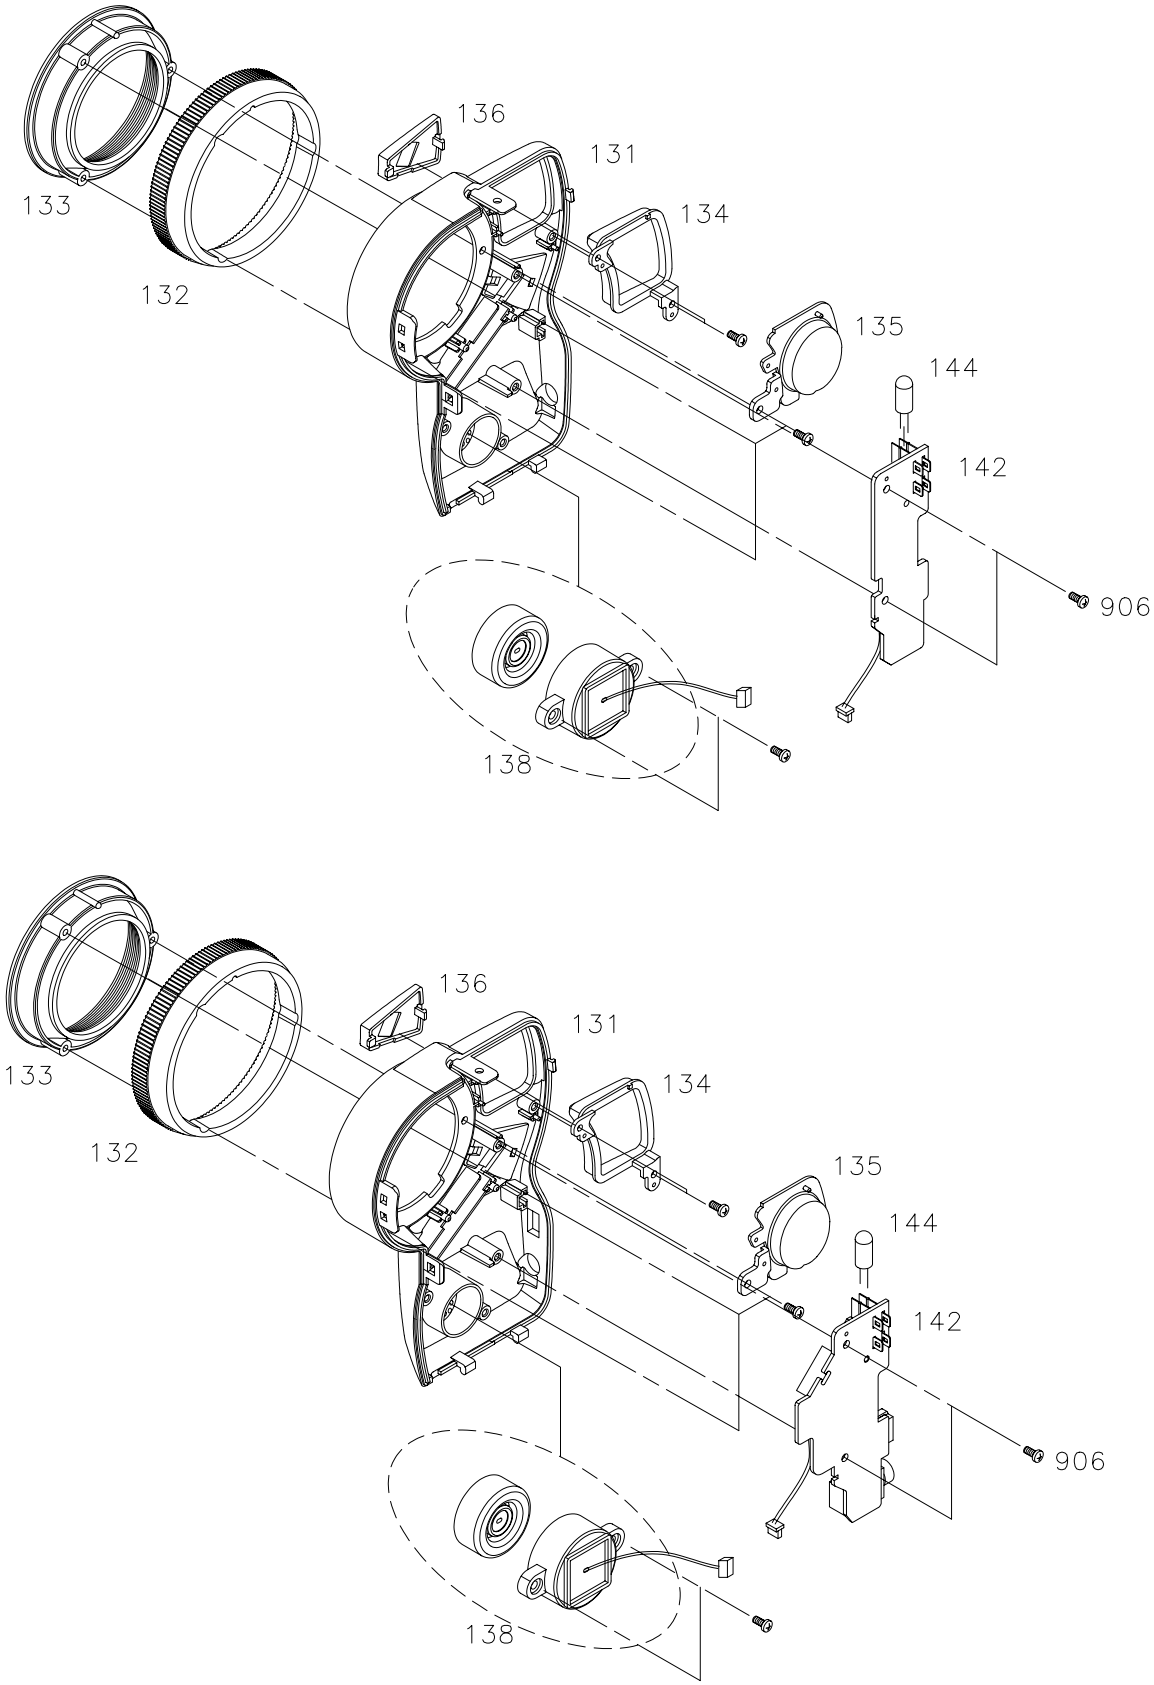

Loc. No	New Part No	Description and Specification	Remark
131	AD64-00693M	CASE-FRONT;880X,MIC(X),USB(X)	SCL810/VP-L800U/L800/VM-C300
	AD64-00693P	CASE-FRONT;880X,MIC(X),USB(O)	
	AD64-00693N	CASE-FRONT;880X,MIC(O),USB(X)	SCL860/VP-L850/L850D
	AD64-00693Q	CASE-FRONT;880X,MIC(O),USB(O)	SCL870/VP-L870/VM-C360/C370
	AD64-00693R	CASE-FRONT;990X,MIC(O),USB(X)	
132	AD67-00157A	LENS-HOOD(AL);AL	
133	AD67-00038C	LENS-HOOD(22X);ABS 94HB BLK	
134	AD64-00697A	MASK-LAMP;PC CLR	VP-L850/L850D/L870 SCL810/860/870
	AD63-00299E	COVER-DUMMY LAMP	VP-L800U/L800/VM-C300
135	AD67-00156A	MIRROR-LAMP;NYLON66(5232G)	VP-L850/L850D/L870 SCL810/860/870
136	AD64-00698A	WINDOW-REMOCON;PMMA TITANE	
138	AD97-04436A	ASSY-MIC;ASS'Y	
142	AD97-04471A	ASSY-FRONT BOARD;MIC(X),LIGHT(0),USB(X)	SCL810
	AD97-04472A	ASSY-FRONT BOARD;MIC(O),LIGHT(O),USB(X)	SCL860/870/VP-L850/L850D
	AD97-04738A	ASSY-FRONT + USB BOARD	VP-L870/SCL870/ VM-C170/C360/C370
144	4713-001152	LAMP-PURE XENON;6V,500mA,3W	
906	AC60-10061A	SCREW-TAPPING(T2X5);BLK	

2-10 Ass'y Camera/Deck

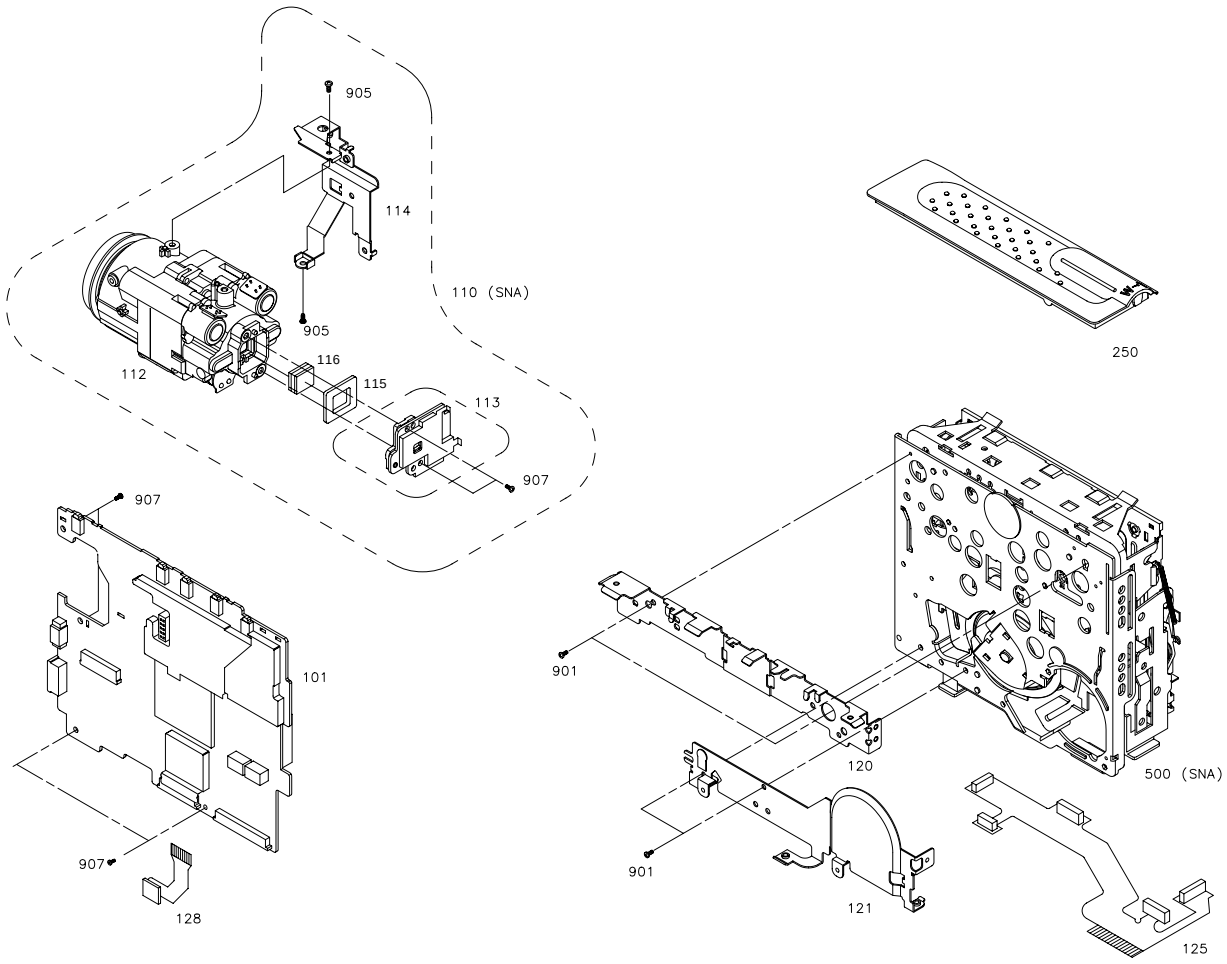

Loc. No	New Part No	Description and Specification	Remark
101	AD97-06018C	ASSY-MAIN BOARD;W6-PJ,VP-L800/XEU,PAL	VP-L800
	AD97-06018S	ASSY-MAIN BOARD;,VP-L800U/XEU,PAL	VP-L800U
	AD97-06018D	ASSY-MAIN BOARD;W6-PJ,VP-L850/XEU,PAL	VP-L850
	AD97-06018T	ASSY-MAIN BOARD;,VP-L850D/XEU,PAL	VP-L850D
	AD97-06018E	ASSY-MAIN BOARD;W6-PJ,VP-L870/XEU,PAL	VP-L870
112	AD97-02879A	ASSY-LENS;22X,W2-PJ,±π^{a}Í»≠ LENS	
113	AD97-04213A	ASSY-CCD BOARD;-,W3-PJ,320K,SONY,KST	
114	AD61-00576A	BRACKET-LENS(22X-180);W-PJ,SUS304,T0.5,-	
115	AD60-00034A	SPACER-CCD;M1-PJ,SILICON ,-,-,-,BLK,-,-,	
116	AD29-00021A	FILTER-OLP;-,W3-PJ,-,-,7.8X7.3X2.42,-,TR	
120	AD61-00222A	CHASSIS-TOP;M1-PJ,SUS304,T0.5,-,-,-,-,-	
121	AD61-00904A	BODY-BOTTOM;W3-PJ,SUS304,T0.5,1/2H,-,-,-	
125	AD97-04461A	ASSY-DECK FPC;D10,W3/4-PJ,DECK FPC	
128	AD97-04462A	ASSY-ROTARY FPC;ROTARY,W3/4-PJ,FPC	
250	AD64-00422A	CASE-TOP;W-PJ,ABS 94HB,-,-,-,-,G3532,-	
500	AD97-04371A	ASSY-DECK;-,DE-10,PAL	
901	6003-001445	SCREW-TAPTITE;PH,+,B,M2,L5,ZPC(BLK)	
905	6003-001443	SCREW-TAPTITE;BH,+,B,M2,L6,ZPC(BLK)	
907	6001-001709	SCREW-MACHINE;BH,+,M2,L3,ZPC(YEL)	

2-11 Ass'y Rear

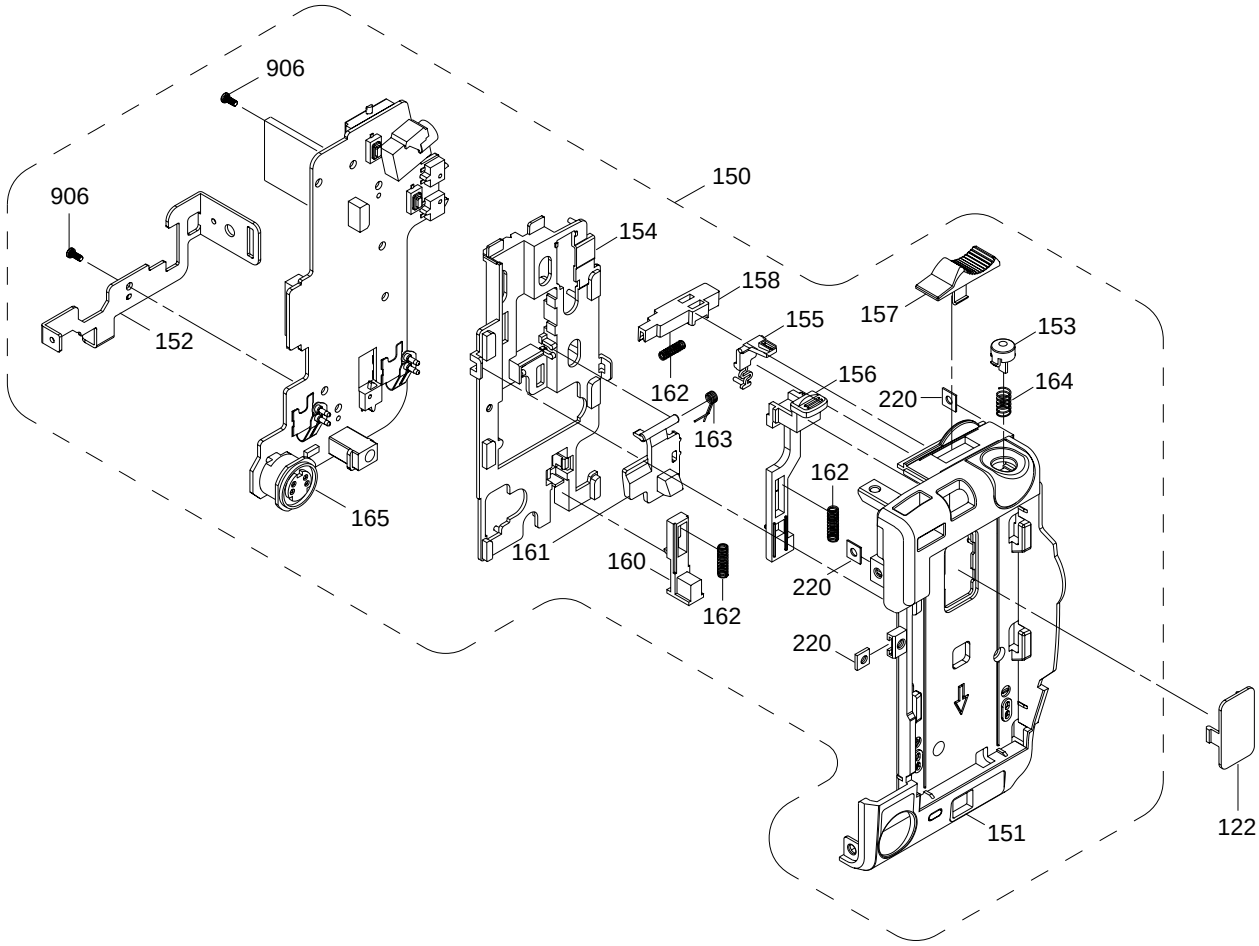

Loc. No	New Part No	Description and Specification	Remark
122	AD63-00064D	COVER-JIG;W-PJ/D/GRAY,ABS94HB	
150	AD97-02602A	ASSY-CASE REAR;ASS'Y:NOR (D.ZOOM)	VP-L800U
	AD97-03188A	ASSY-CASE REAR;ASS'Y:Hi8 (D.ZOOM)-	VP-L800
	AD97-02604A	ASSY-CASE REAR;ASS'Y:Hi8 (S.SHOT)	VP-L850/L850D/L870
151	AD64-00418A	CASE-REAR;NOR (D.ZOOM)	VP-L800U
	AD64-00418E	CASE-REAR;Hi8 (D.ZOOM)	VP-L800
	AD64-00418C	CASE-REAR;Hi8 (S.SHOT)	VP-L850/L850D/L870
152	AD61-00578A	BRACKET-REAR(W2);SUS304 T0.8 1/2H	
153	AD64-00423A	BUTTON-SNAP SHOT;ABS94HB HF0660I G3532	
154	AD61-00573A	HOLDER-BATTERY EJECT;ABS94HB HF0660I G3532	
155	AD61-00574A	HOLDER-SNAP SHOT;POM NTR	
156	AD64-00431A	KNOB-BATTERY EJECT;ABS94HB HF0660I G3532	
157	AD64-00432A	KNOB-ZOOM;ABS94HB HF0660I G3532	
158	AD61-00602A	HOLDER-ZOOM;POM NTR	
160	AD64-00176B	KNOB-DIDECTOR;ABS94HB HF0660I G3532	
161	AD64-00182B	LOCKER-BATTERY;POM BLK	
162	AD61-00218A	SPRING-BATTERY EJECT;SUS 304 WPB	
163	AD61-00219A	SPRING-BATTERY LOCK;SUS 304 WPB	
164	AD61-00220A	SPRING-SNAP SHOT;SUS 304 WPB	
165	AD97-02890A	ASSY-REAR B'D;ASS'Y(NORMAL)	VP-L800U
	AD97-02894A	ASSY-REAR B'D;ASSY(Hi8)	VP-L800/L850/L850D/L870
220	AC61-32047A	PLATE-NUT;SECC T0.8	
906	AC60-10061A	SCREW-TAPPING(T2X5);BLK	

MEMO